



CT110 ECS - MICRO SCRUB quick guide

This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

PREPARATION/ OPERATION

1. Fill the detergent tank.



2. Turn the ignition key to switch the machine on.



3. Press the brush button to enable brush and suction motor operation. Hold the button down for at least five seconds to select the operating mode MICROFIBRE / BRUSH-PAD.



4. Press the "+" and "-" buttons to set the pressure of the brushes on the work surface.



5. Press the "SELECT" button to adjust the detergent flow according to the type of washing.

With the machine in BRUSH-PAD mode, there are four options:

- **STANDARD**, the flow is adjusted by pressing the "+" and "-" buttons
 - **AUTOMATIC**, the flow is set automatically by the machine
 - **ECONOMY**, the flow is set to the lowest value
 - **CHEM DOSE**, enables the detergent tank pump.
- When using the machine in MICROFIBRE mode, the detergent flow can be regulated in two different ways:
- **MICROFIBRE**, when using the machine in MICROFIBRE mode, the detergent flow can be modified by pressing the "+" and "-" buttons only.
 - **CHEM DOSE**, enables the detergent tank pump.



6. Turn the potentiometer to set work speed.



7. Operate the machine movement pedal. Press it forwards to move the machine forwards.



Press it backwards to move the machine backwards



8. Begin working.



9. When you have finished cleaning, proceed as follows:
- Turn the brush motor off.
 - Turn the ignition key.
 - If necessary, charge the batteries.



DAILY MAINTENANCE

Empty the dirty water drum through the drain hose.



Clean the dirty water drum.



Check the suction filter is undamaged and clean.



Check the detergent output filter is undamaged and clean. Always remember to close the valve upstream of the filter before checking.



Clean the brushes, wash the microfibre disk.



Check the squeegee is clean and the blades are not damaged.



Check the battery charge.



To charge, insert the battery charger connector in the connector under the seat.



REPLACING THE SQUEEGEE BLADES

- release the clip;
- remove the two blade retainers by pushing them towards the outside of the squeegee then extracting them;
- remove the blade;
- reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee;
- reposition the two blade retainers by centring the widest part of the slots over the fixing screws on the squeegee body, then pushing the blade retainers inwards;
- fasten the clip.



BRUSH ATTACHMENT/RELEASE

Attaching the brushes: Raise the side flaps on both sides and position the disks under the housing, making sure they rest against the stops to align them with the attachment device. Press the brush button and the machine performs the automatic attachment manoeuvre.



Removing the brushes: Turn off all devices (head and suction motors) and press the release button for five seconds. The machine performs the automatic release manoeuvre.



TROUBLESHOOTING

THE MACHINE DOES NOT COME ON/START UP	CHECK THE EMERGENCY BUTTON IS NOT PRESSED
	CHECK THE BATTERY CHARGE
THE SUCTION MOTOR DOES NOT WORK	CHECK THE DIRTY WATER DRUM IS NOT FULL
	CHECK THE DIRTY WATER DRUM LEVEL SENSOR IS NOT BLOCKED/MALFUNCTIONING
THE MACHINE LEAVES THE FLOOR WET	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THERE IS NO DEBRIS IN THE SUCTION HOSE
	CHECK THE SUCTION FILTER IS UNDAMAGED AND CLEAN
	CHECK THE DIRTY WATER DRUM LID SEAL IS UNDAMAGED.
	CHECK THE SUCTION HOSE IS CORRECTLY ATTACHED TO THE SQUEEGEE
THE MACHINE LEAVES THE FLOOR DIRTY	CHECK THE TYPE OF BRUSH/PAD/MICROFIBRE IN USE IS SUITABLE FOR THE TYPE OF DIRT AND FLOOR.
THE MACHINE LEAVES STRIPES OF WET FLOOR	CHECK THE FLOOR HAS BEEN BRUSHED BEFORE USING THE MACHINE
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THE SQUEEGEE IS CORRECTLY ADJUSTED