

CT70 ECS/CT40 BT60 ECS quick guide

This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

PREPARATION/ OPERATION

1. Fill the detergent tank.



2. Release the emergency button to turn the machine on.



3. Lower the squeegee using the lever.



4. Press the brush button. The machine automatically lowers and attaches the brushes and starts the suction motor.




5. Hold the brush button down for 3 seconds to choose the type of operation, "MICRO SCRUB" or with traditional brush.



6. Press the suction motor button to disable suction if you want to prewash the surface.



7. Choose the direction of movement by moving the direction selector, turn the potentiometer to set the work speed.

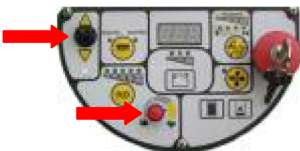

8. Operate the drive lever.



9. Press the "H2O" button for at least 2 seconds to enable detergent flow. Press the button repeatedly to vary the quantity delivered.



10. Adjust head pressure on the surface to be cleaned by pressing the button repeatedly to vary the pressure. The pressure exerted is indicated by an LED display on the control panel.



11. Begin working.

12. When you have finished cleaning, proceed as follows:

- Turn the brush motor off.
- Stop the detergent flow
- Turn the suction motor off.
- Press the emergency button.
- Raise the squeegee.
- If necessary, charge the batteries.



DAILY MAINTENANCE

Empty the dirty water drum through the drain hose.



Clean the dirty water drum.



Check the suction filter is undamaged and clean.

